

Fiberline HD Clamp

Custom-made bracket for mounting Fiberline HD plank on substructures of steel or fibreglass. The bracket is clamped against the flange, thus ensuring a stable load transmission. The bracket is designed to be fitted anywhere under the plank and it is not necessary to push it from one side.

Installation guide

Angle the preassembled HD clamp between the legs of the HD plank. Push the bracket right up until the HD clip is inside between the legs of the plank.

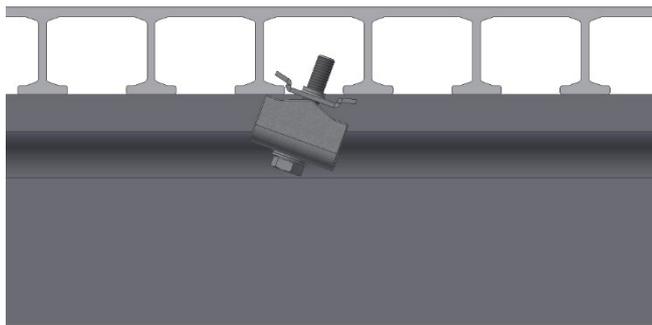


Figure 1

Straighten the bracket and pull it down to the feet of the plank. Make sure that the bracket is in the middle of the legs.

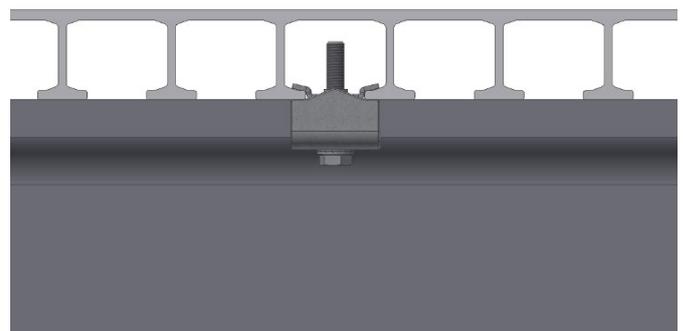


Figure 2

Move the bracket assembly towards the substructure and tighten the bolt to 5 Nm.

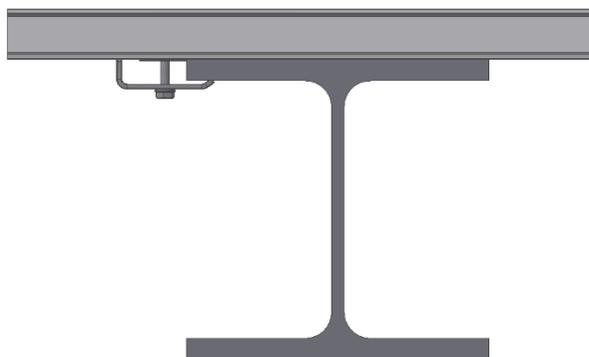


Figure 3

We advise fastening the plank with two HD clamps in the 3rd and 8th cavities as shown in figure 4.

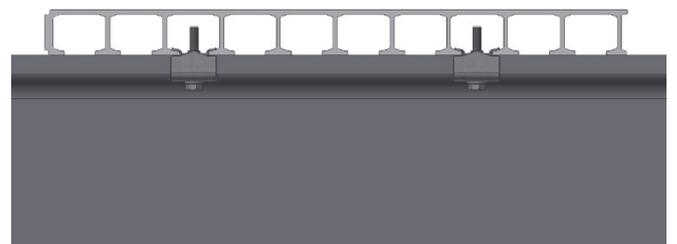


Figure 4

Components of the HD Clamp

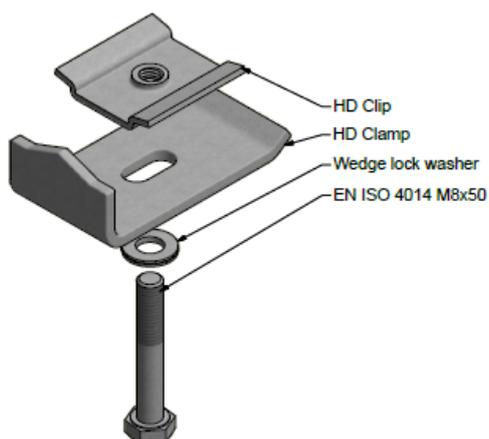


Figure 5